

PRODUCT INSTALLATION GUIDE
2010+ CAMARO HIDEAWAY HEADLIGHT COVERS
CAM10-HHC1-A

IMPORTANT: PRO CUSTOM PRODUCTS, INC. IS NOT RESPONSIBLE FOR IMPROPER INSTALLATION. IF YOU DO NOT FEEL 100% CONFIDENT INSTALLING THIS PRODUCT, SEEK PROFESSIONAL ASSISTANCE.




1) FIT BOTTOM TABS BETWEEN THE HEADLIGHT LENS, AND THE FACIA.



2) TIP THE TOP OF THE HEADLIGHT COVER BACK.



3a) FIT THE TOP TABS BEHIND THE FACIA.
SHOWN HERE: IMPROPERLY FIT

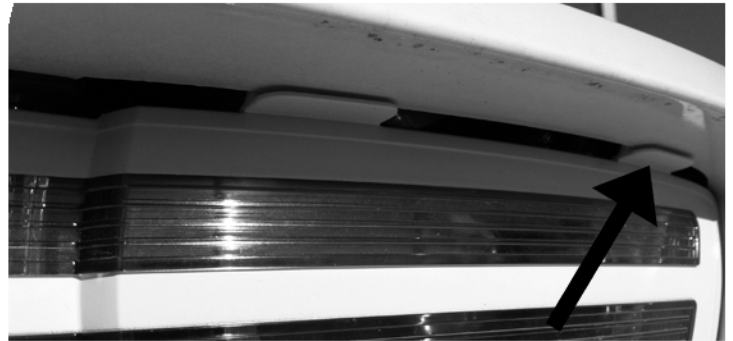

3b) BE SURE YOUR TOP TABS FIT INTO PLACE AS SHOWN HERE.
SHOWN HERE: PROPERLY FIT



4) PROPERLY FIT BOTTOM TABS.



5) PROPERLY INSTALLED HIDEAWAY HEADLIGHT COVER.
ENJOY!